




THE AUTOMOTIVE LIGHTING BENCHMARK

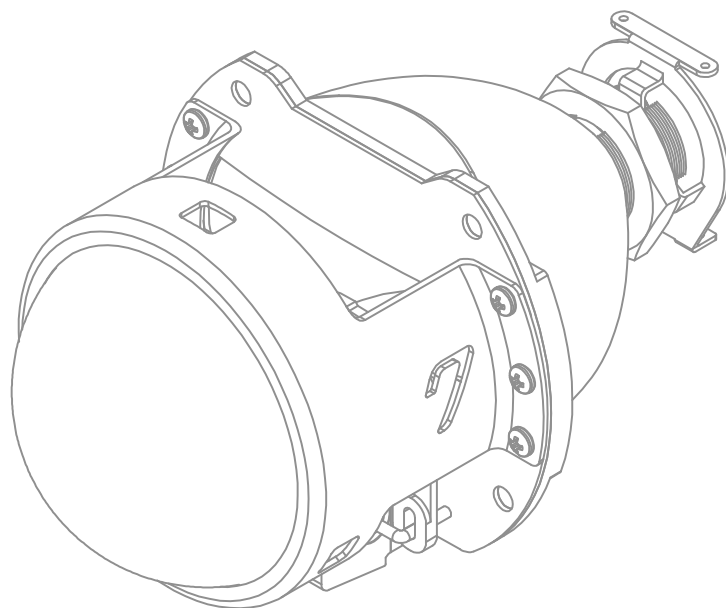

INSTALLATION GUIDE
AUDI A4 (B6) RETROQUIK



WARNING: By reading this document, I agree it is only to be used as an educational guide. Morimoto Lighting makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.


TABLE OF CONTENTS

KIT CONTENTS	P.3
HARDWARE ASSEMBLY	P.4
PROJECTOR INSTALLATION	P.5
SYSTEM DIAGRAM	P.6
BULB INSTALLATION	P.7
HARNESS INSTALLATION	P.8
BALLAST INSTALLATION	P.8


TOOLS REQUIRED

#1 PHILIPS HEAD SCREWDRIVER
#2 PHILIPS HEAD SCREWDRIVER
METRIC SOCKET SET

STANDARD PARTS




2X PROJECTORS



2X RQ HARDWARE / BRACKETS


OPTIONAL PARTS



2X HID BULBS



2X BULB WIRES



2X BALLAST COMPUTERS



2X AMP IGNITERS




2X CANBUS HARNESSES



2X HIGH BEAM SPLITTERS


1

Remove the six #1 Philips screws holding the lens holder to the back of the projector. The six OEM screws can be discarded and are not reused.

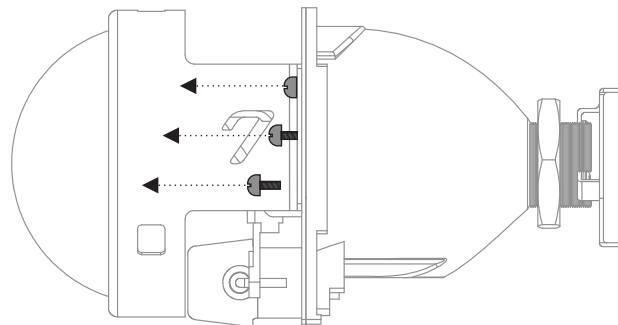


2

Fit the RetroQuik bracket in place.

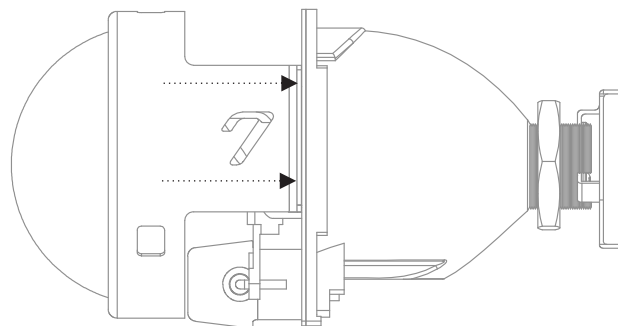


3

Install the provided six (6) longer screws into the same location as the OEM screws and snug up.

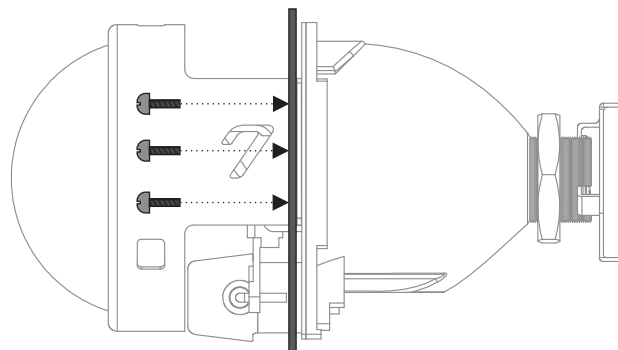

4

Insert the solenoid wiring into the solenoid's plug at the rear of the projector. Add one 9006 socket grommet per wire past the pin, then click the pins into the 9006 male connector as shown. Seat the 9006 socket grommets down into the back of the connector around the pins.

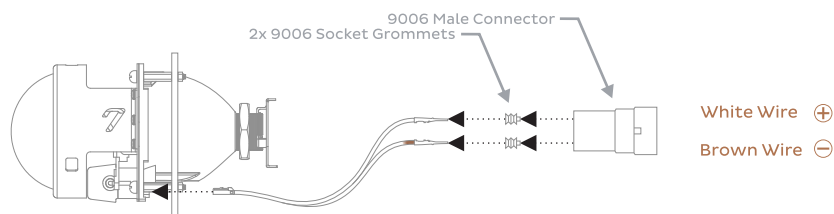


1

Un-clip and remove the plastic housing cap to access the OEM projector.




2

Remove the three nuts that secure the OEM projector. Install the Mini H1 projector in its place, and reinstall the OEM screws to retain the new projector.

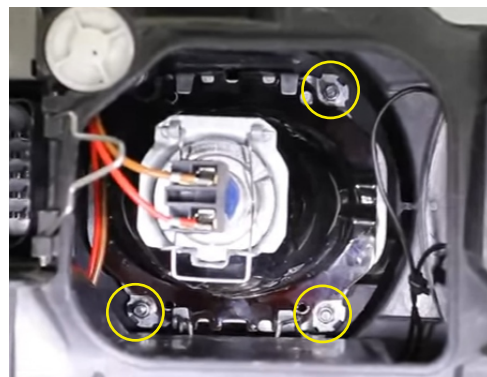

Continue to
Page 6


NOTE: this diagram is for one side of the vehicle. Copy this layout for both sides to complete the install.

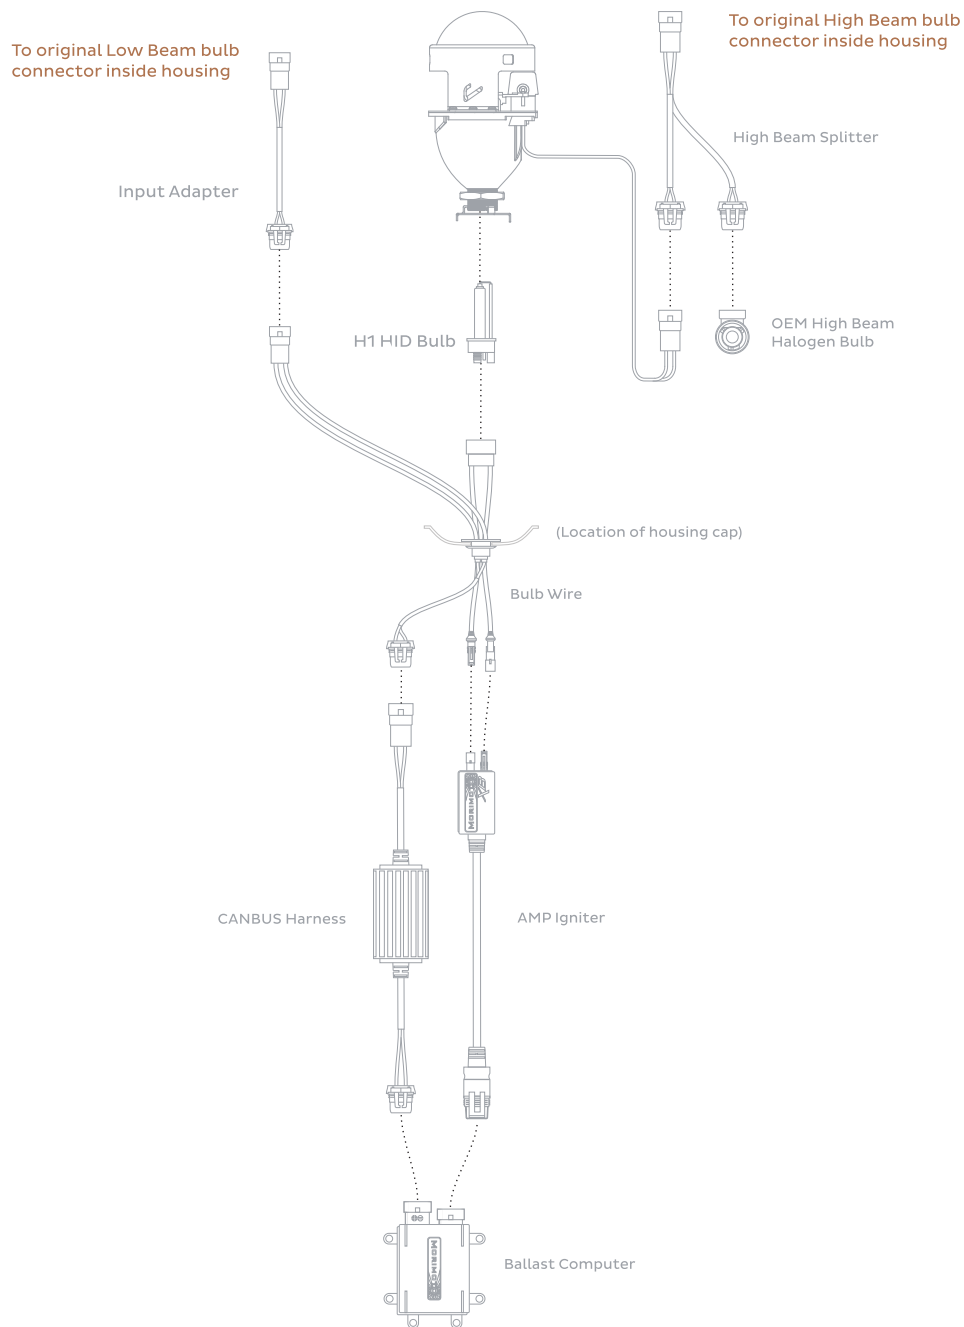

BULB INSTALLATION


1

Using an alcohol wipe, clean the glass capsule of the HID bulb.

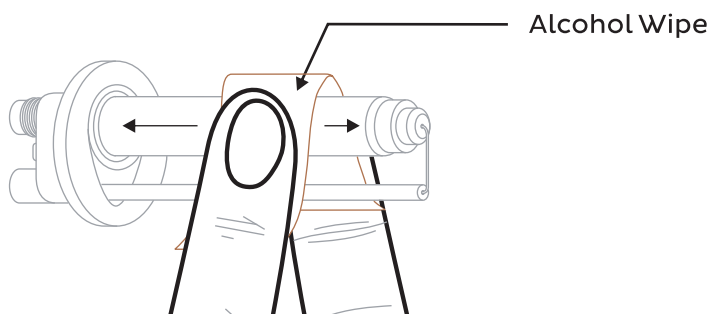


2

Insert the bulb with the ground wire at the 6 o'clock position (bottom).

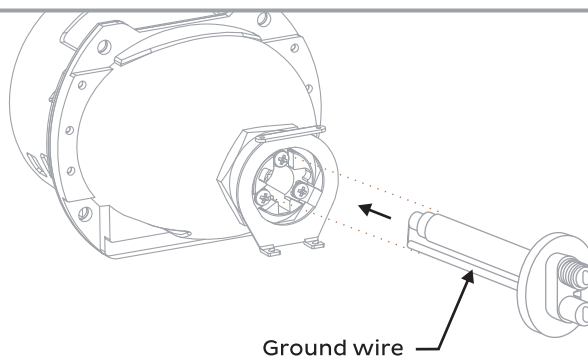


3

Insert the two ends of the bulb clip into the bulb holder.

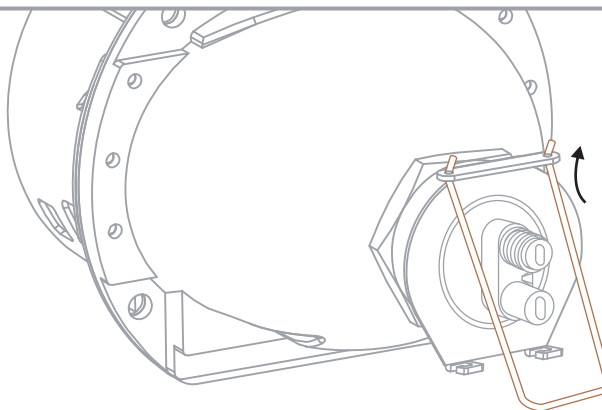


4

Clip in the bottom of the bulb clip to both hooks to properly secure bulb in the projector.

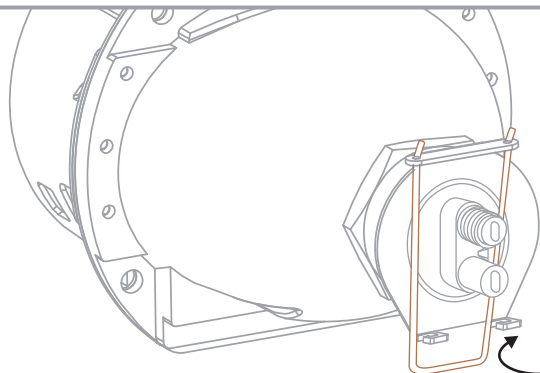


5

Click bulb wire connection onto bulb. Ensure the internal tab is fully latched.

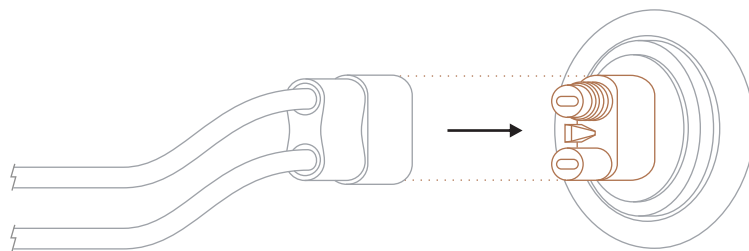

HARNESS INSTALLATION


When installing the harness, ensure every connection is securely fastened and can't loosen over time.

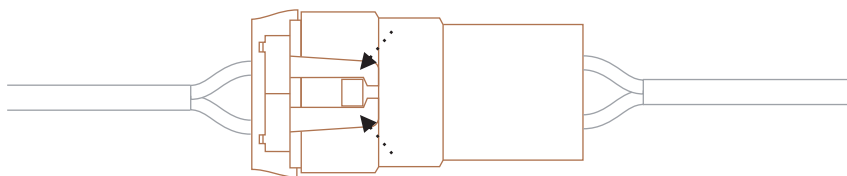

BALLAST INSTALLATION

1

Connect "Ballast Output" from harness to the ballast input and AMP igniter to ballast.

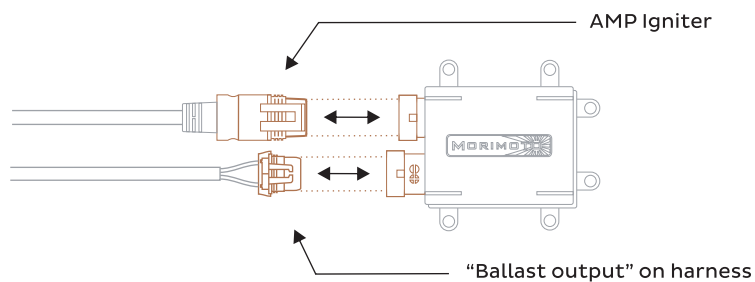

2

Do not mount ballast with connectors aimed upward!

Recommended mounting:

