



bajadesigns®
The Scientists of Lighting

2014-2018 Toyota 4Runner Split Dual S8 Upper grill kit



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
The Scientists of Lighting

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.



baja designs[®]
The Scientists of Lighting

4Runner Dual Split 10 inch S8 Upper Emblem Grill kit

Tools Required

10mm socket

½" socket

½" wrench

7/16" socket

Standard screwdriver (flathead)

1. To begin, open the hood and locate the plastic push fasteners that are positioned around the perimeter of the plastic radiator cover (13 Total).






baja designs
The Scientists of Lighting

2. To remove the fasteners, gently press straight down onto the circular portion of the head until it is in the lowered position shown below.



3. Now, it is important to remove each fastener individually, or else they will most likely be thrown in every direction while removing the panel. Removal of the fasteners can be completed by hand, or assisted by the use of a standard screwdriver. Once the fasteners are removed, the radiator cover can then be taken off of the vehicle.
4. Locate the upper grill plastic fasteners on the inner backside of the grill (4 total). Gently pry up in the grooved portion of the fastener until it has risen above its plastic base. Once it is about 1/8" above, both can be removed by hand, or assistance with a standard screwdriver. These holes will be used to mount each bracket.

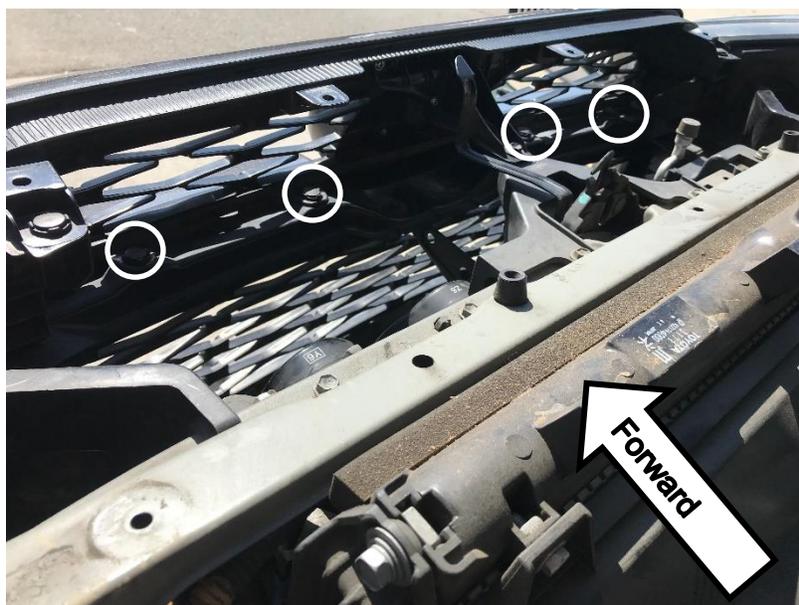



baja designs
The Scientists of Lighting

5. Place brackets near the grill so it can be determined where each is meant to be mounted. The side of the bracket that is nearest the headlight must angle toward the front of the vehicle.



6. Now it is time to mount each light into a bracket. Using a 7/16" socket, tighten the provided 1/4" diameter bolt with washer through the bracket into the light housing. Make sure that the desired angle is set at this moment. The entire light/bracket assembly will have to be removed to make adjustments. Place the 5/16" bolts and accompanying washers through the bracket.





baja designs[®]
The Scientists of Lighting

7. Place each light/bracket assembly into their perspective side through the mounting holes and tighten the 5/16" washers and nuts on the underside of the factory core support.
8. To replace the plastic fasteners in the radiator cover, each must be reset. To reset, hold the outer portion of the fastener and press it down gently on top of a flat surface. This will push the head of the fastener above the outer portion and allow it to be reinserted into the hole. Reset all fasteners, place radiator cover back onto the vehicle, and then place the fasteners into each hole. To lock the fasteners, push the head down until it is just flush with it's outer portion.

Retorque all fasteners after 100 miles.

See the instructions supplied with the wiring harness to complete wiring needs.

Your install is now complete! Thank you for choosing Baja Designs.