



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

## **2019 Chevrolet Silverado 20" S8 Grille kit Instructions (44-7519)**



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

[info@bajadesigns.com](mailto:info@bajadesigns.com) • [www.bajadesigns.com](http://www.bajadesigns.com)



**baja designs**<sup>®</sup>  
The Scientists of Lighting

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.**



**baja designs**  
The Scientists of Lighting

**2019 Chevy Silverado 20" grill S8 kit instructions**

**Tools Required**

13mm wrench

7/16" & 10mm socket wrench

Standard screwdriver (Flathead)

T20 torx bit driver

1. To begin, open the hood and locate the plastic radiator cover pictured below.



2. The cover is held in place with push style plastic fasteners. To release them, pry up the head with a standard screwdriver in the grooved portion pictured below. Then pry the entire fastener out of the cover and set aside. Remove all until the cover is free.






**baja designs**  
The Scientists of Lighting

3. With the T20 torx bit driver, remove the hood latch handle screws and set the handle aside. Remove the radiator cover. Now, the grill will have to be removed.
4. With the 10mm socket wrench, remove the four arrowed bolts below. Gently lift the top edge up and out to release the upper portion of the grill.



5. Now, **carefully** pull the section of the grill that is across the headlight on one side. Use both hands on the top and bottom portions of this section. It will take a good amount of force, but the clips will release. Repeat for the opposite side. Now the grill can be tilted forward to access the mounting location for the S8 light bar.
6. Looking down the opening at the top of the radiator, locate the two bolts pictured on the passenger side below. Now locate the same two bolts on the driver side. These will be used to mount the brackets.

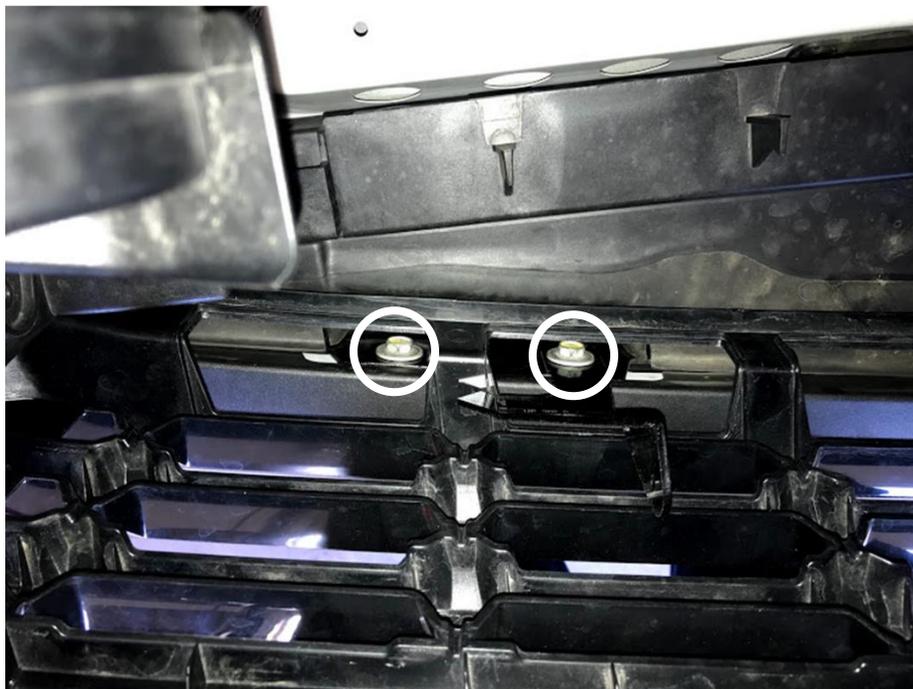



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

7. With the 13mm wrench, loosen the bolts until there is approximately 3/16" of space between the washer on the bolt and the surface that it fastens to. With the 1/4" hole of the bracket nearest the center of the vehicle for both sides, slide each bracket behind their respective bolts. Tighten fairly snug.
8. Carefully place the light between the brackets and insert the 1/4" hardware with washers. Aim the light and tighten. Finally, snug the 13mm head bolts from step 6.
9. Lift the top edge of the grille and place it back over the mounts from step 4. Press the sides of the grill nearest the headlights back onto the vehicle until the clips audibly engage. Replace the four 10mm hex head bolts.
10. Replace the radiator cover and insert all the plastic fasteners from step 2. Press the head of the plastic push fasteners in to lock the cover in place.

Re-torque all the fasteners after 100 miles.

See the instructions supplied with the wiring harness to complete wiring needs.

Your install is now complete! Thank you for choosing Baja Designs.