




THE AUTOMOTIVE LIGHTING BENCHMARK

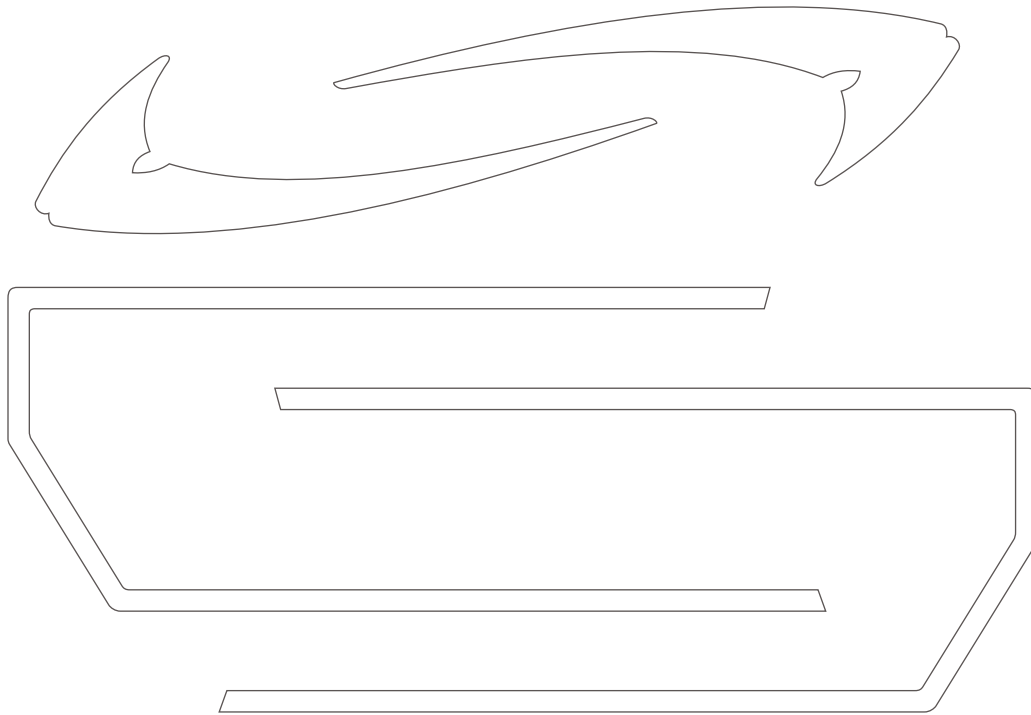

INSTALLATION GUIDE

XSB ACCENTS



WARNING: By reading this document, I agree it is only to be used as an educational guide. Morimoto Lighting makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.

PROFESSIONAL INSTALLATION RECOMMENDED

12V

12VDC INPUT




DO NOT CUT!



DO NOT GLUE!


SCHEMATIC

1

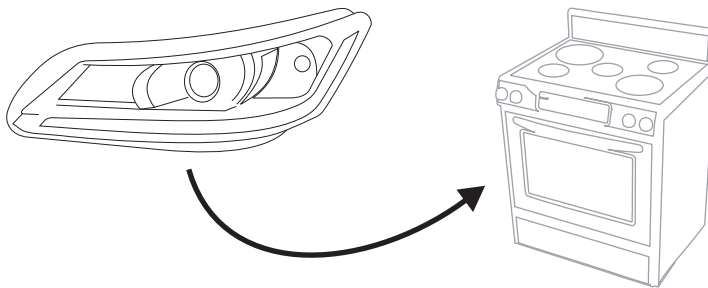

Place headlight in oven for seven (7) minutes at 270 Fahrenheit / 130 Celsius to soften the existing sealant. Be sure no wires or other hanging parts are touching the wire rack.


2

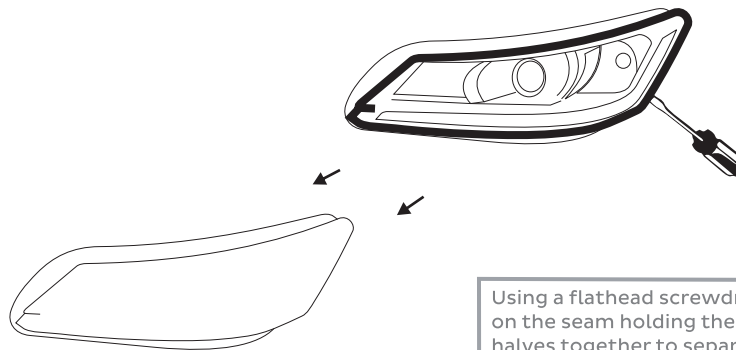

Using a flathead screwdriver, pry gently on the seam holding the two housing halves together to separate them.


NOTE: Gloves are recommended!

3

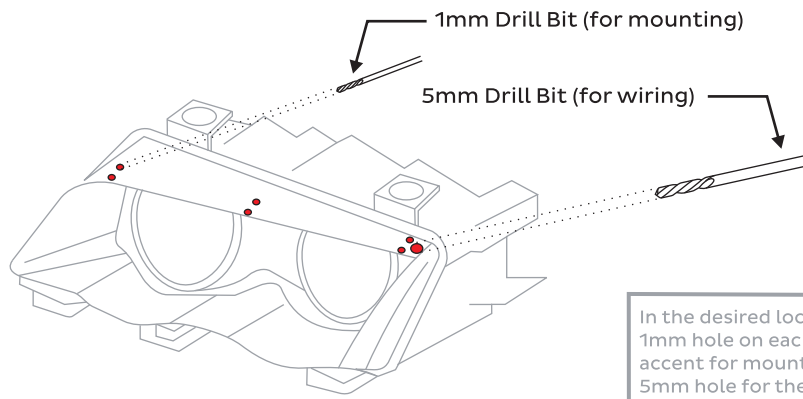


In the desired locations, drill a 1mm hole on each side of the accent for mounting and a single 5mm hole for the wiring to pass through the shroud/bezel.

4



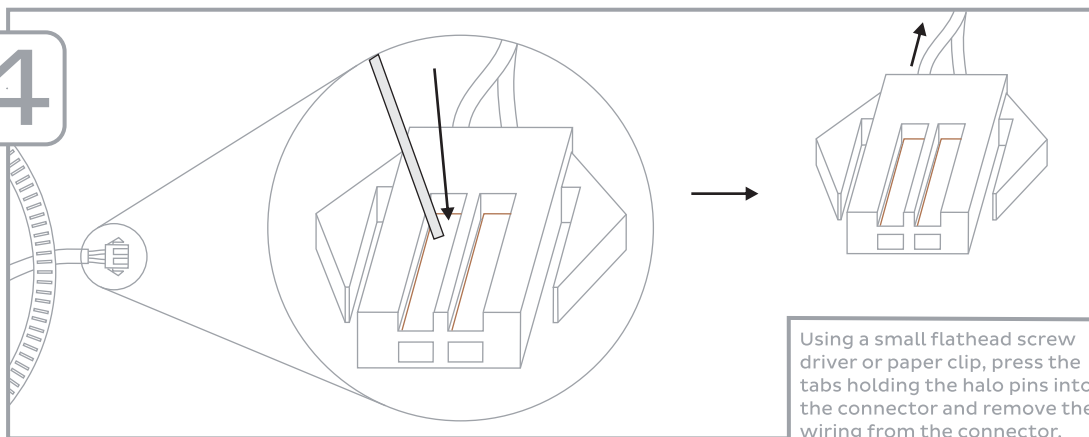


Using a small flathead screw driver or paper clip, press the tabs holding the halo pins into the connector and remove the wiring from the connector.


5

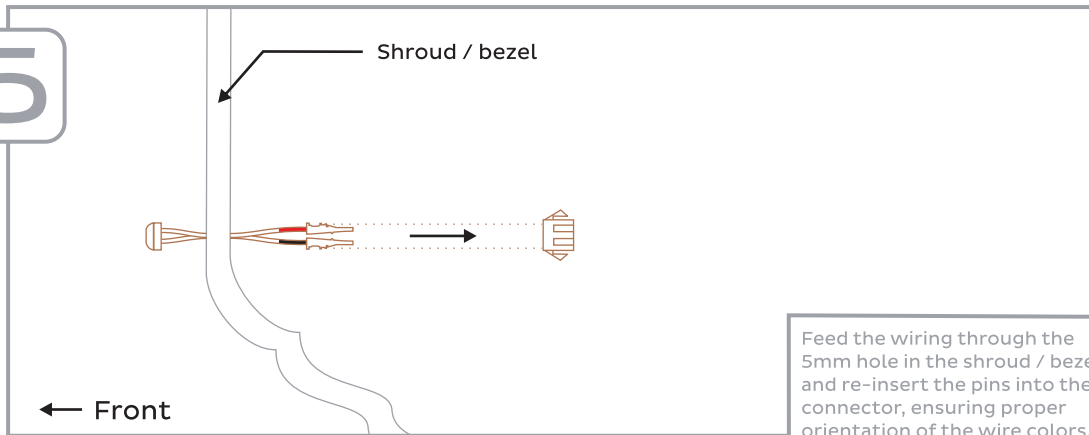

Feed the wiring through the 5mm hole in the shroud / bezel and re-insert the pins into the connector, ensuring proper orientation of the wire colors.

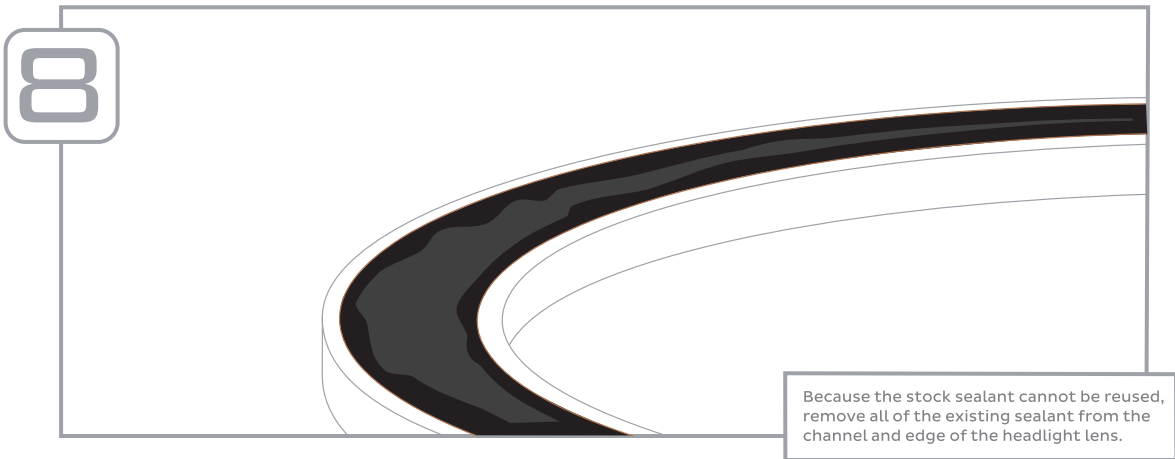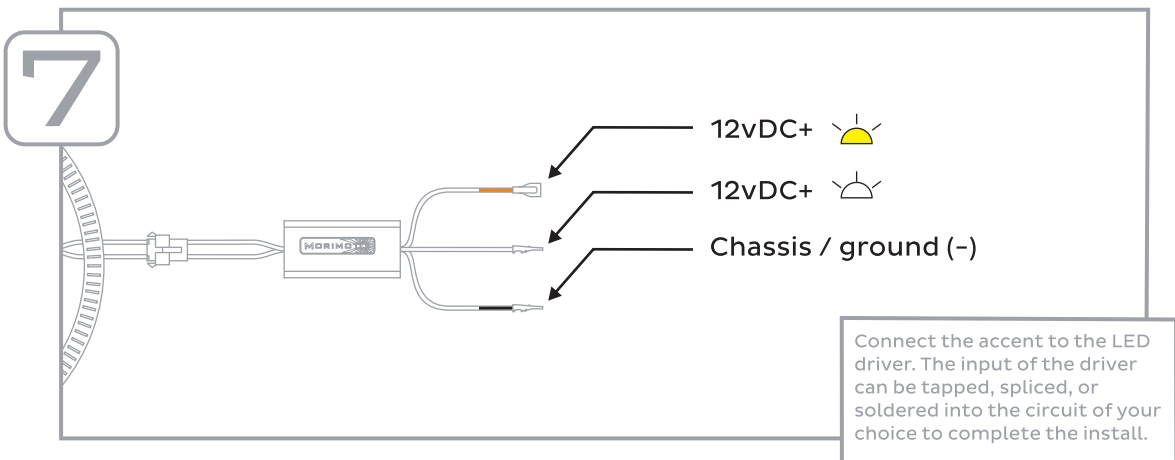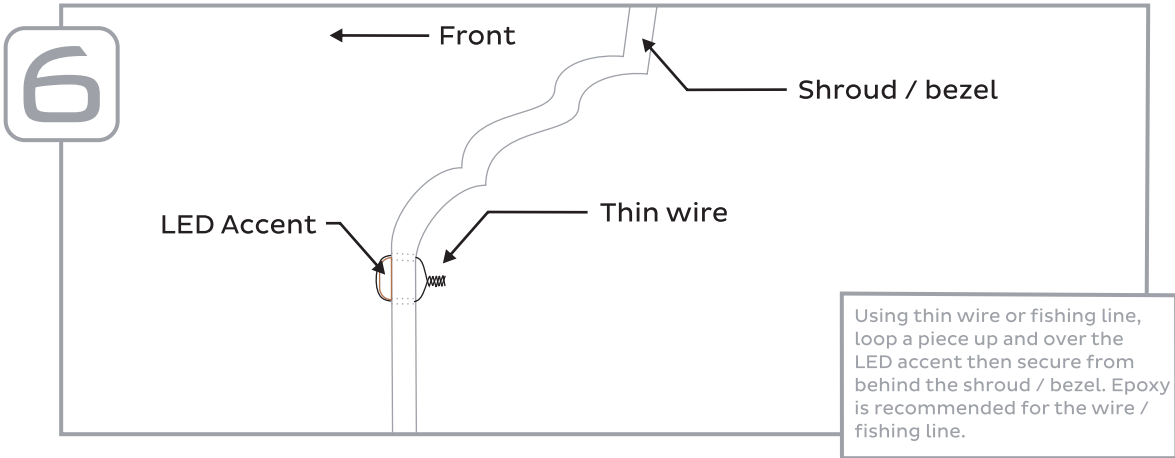


6

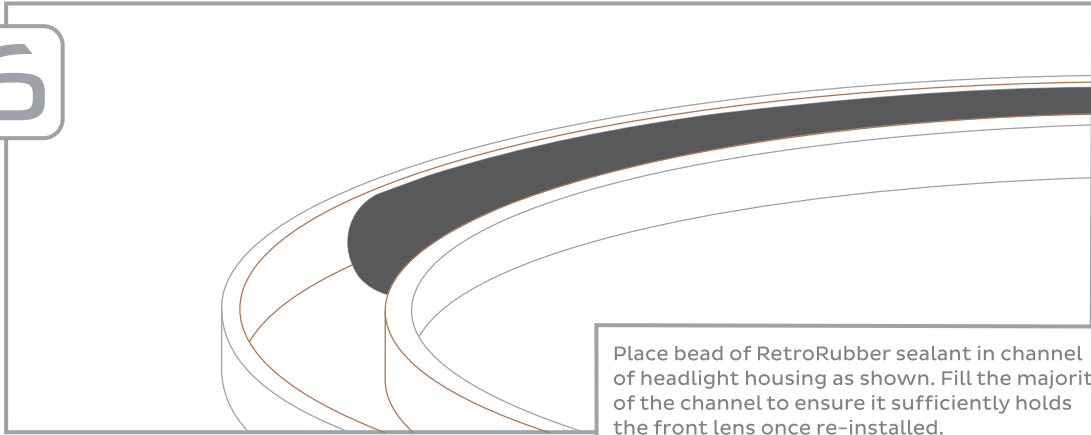


Place bead of RetroRubber sealant in channel of headlight housing as shown. Fill the majority of the channel to ensure it sufficiently holds the front lens once re-installed.

7

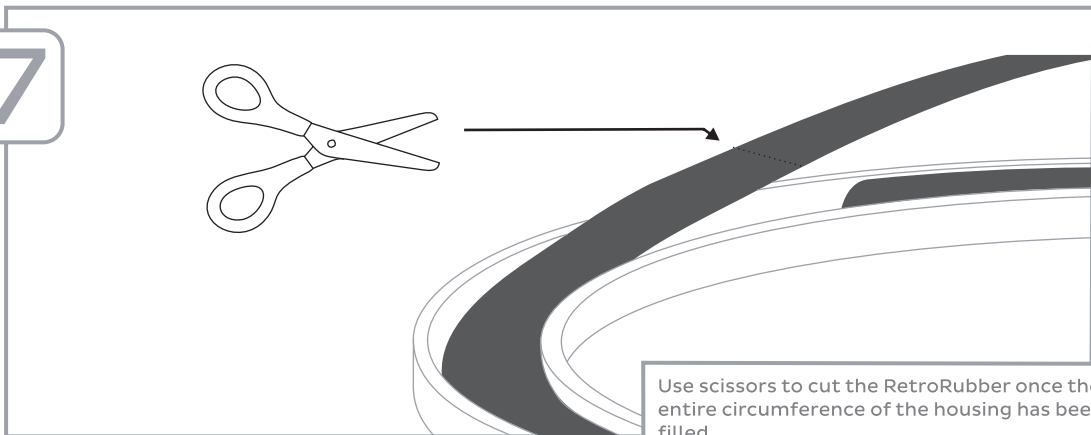


Use scissors to cut the RetroRubber once the entire circumference of the housing has been filled.

8

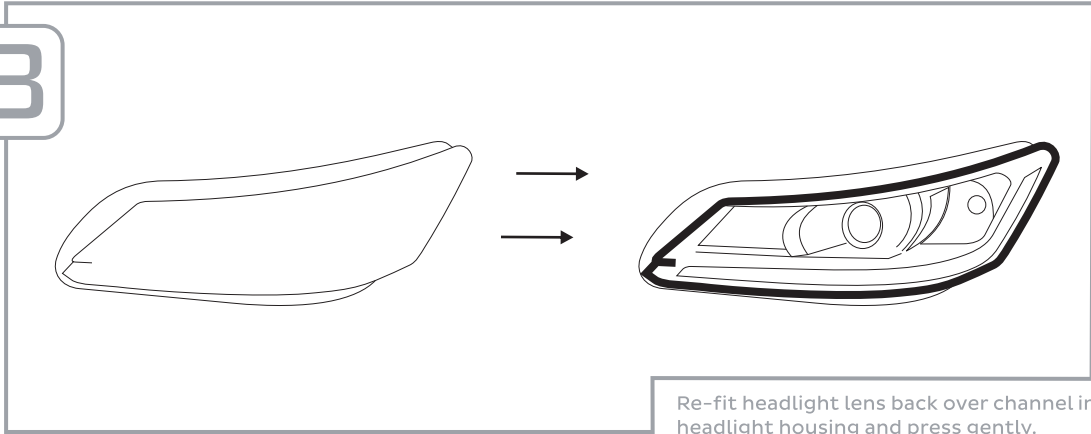


Re-fit headlight lens back over channel in headlight housing and press gently.

6

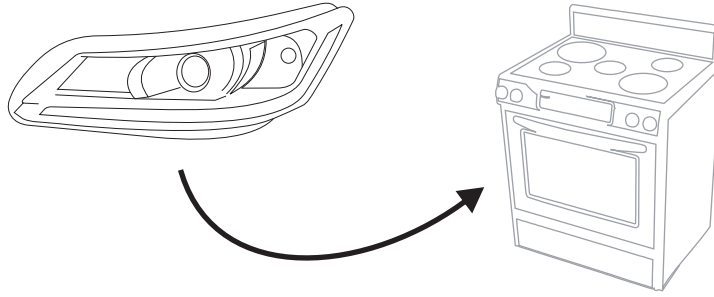


Place entire headlight in oven for seven (7) minutes at 270 Fahrenheit / 130 Celsius to soften the new sealant.

7

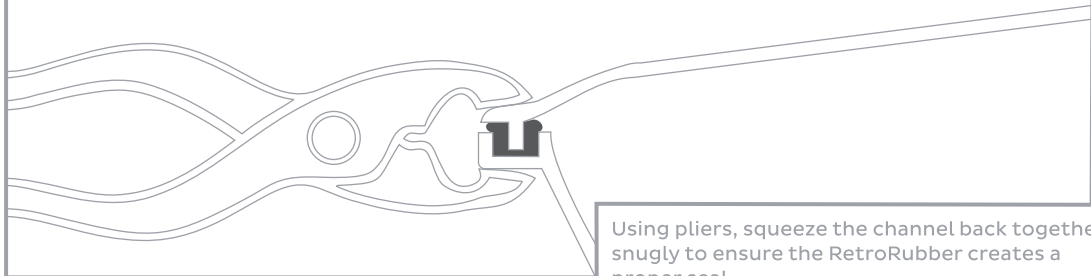

Using pliers, squeeze the channel back together snugly to ensure the RetroRubber creates a proper seal.

8

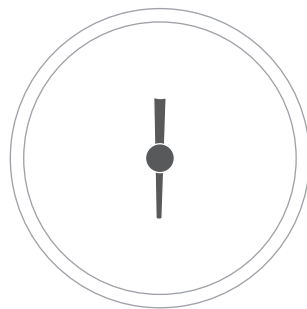

00:30:00

Allow thirty (30) minutes for headlight to sufficiently cool down prior to re-installation on car.

-END-